


Record your model number.	Warning: Risk of personal injury. Do not cut or drill tempered glass. Tempered glass will shatter if cut or drilled.	Important Information The handle or towel bar can be installed individually, back-to-back, or in combination. An escutcheon kit is required to cover exposed hardware for single or mixed configurations.	Roughing-In: Single or Back-to-Back	Roughing-In: Handle/towel bar combination	All Installations: Install the gaskets with the collars toward the holes.
			Handle Towel Bar  6" (152 mm)	6" (152 mm) 18" (457 mm) 6" (152 mm)	Ø 1/2" (13 mm)
2 Single: Assemble the spacers, posts, and screws. Insert the screws opposite the handle side.		3 Back-to-back: Assemble the screws and posts.	Back-to-back: Attach the handles/towel bars with the setscrews.	4 Combination: Assemble for single and back-to-back configurations. Thread escutcheons over exposed hardware.	

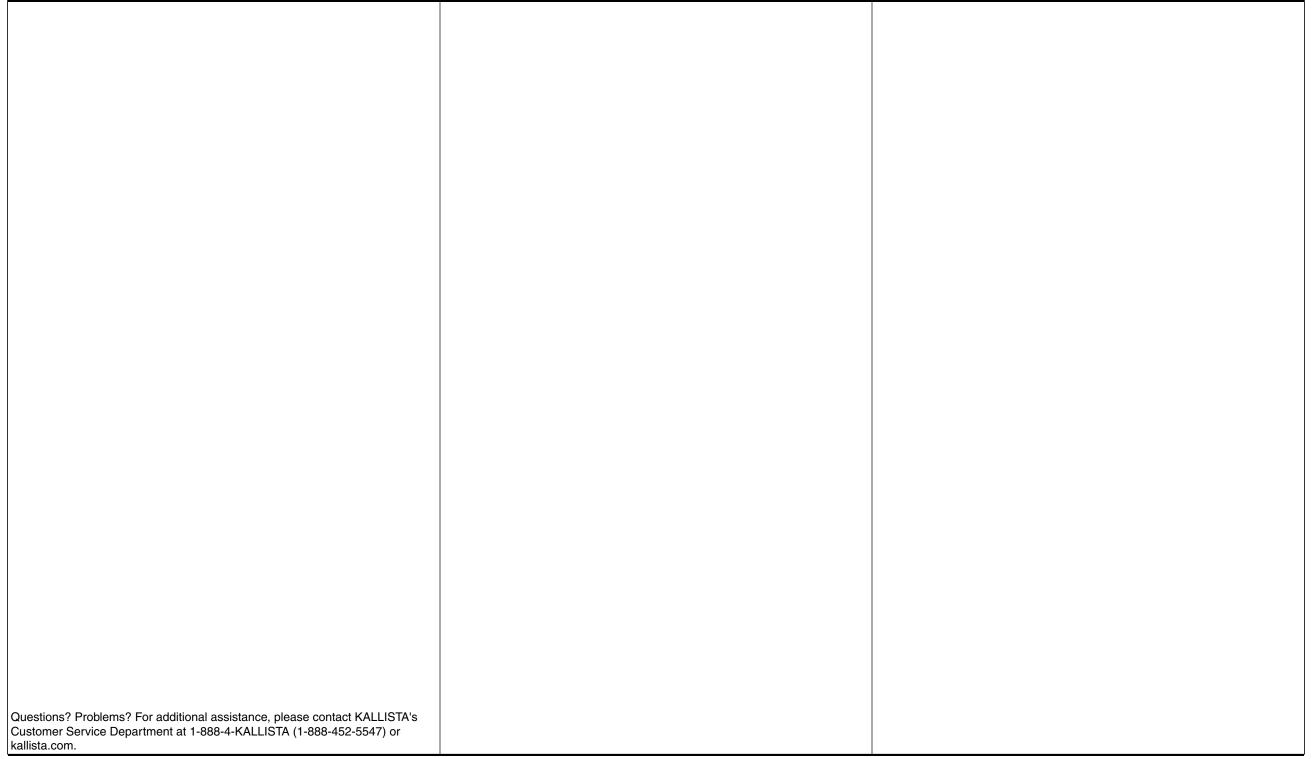

1284154-2-**B** © 2019 KALLISTA