


**A**

- 1) It is very important to position your cabinet knobs in the same position on all doors.
- 2) To facilitate this, we have provided a drilling template. This template will help you drill the mounting hole for the cabinet knob in the same position on all doors.
- 3) First, find the best location for the knob on the door. This is commonly in the location shown on the drawing to the right (for upper doors).
- 4) Mark the location of the center of the knob on the door with a pencil. This will be the mounting hole location.

Right Hand Upper Door




**KNOBS ALWAYS MOUNT  
OPPOSITE THE HINGES**

**B**

- 1) Slide the plastic template over the corner of the first door.
- 2) Mark the drill hole location on the template with a marker.
- 3) Remove the plastic template from the door and flip it over so the back side is facing you.
- 4) Mark the drill hole location on the side of the template in the same position as the first hole. This will allow you to use the template for left hand doors.
- 5) Drill a 1/8" diameter hole in both sides of the template where you have marked.


Right Hand Upper Door

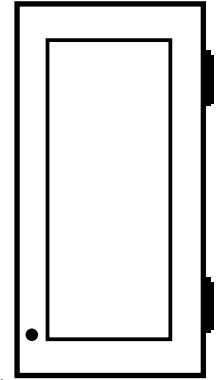


**C**

- 1) Slide the template onto the door again, and mark the hole location.
- 2) Drill a 1/8" pilot hole in the marked location.
- 3) Drill a 1/4" hole for CRYSTAL KNOBS.
- 4) Drill a 3/16" hole for BRASS KNOBS.
- 5) Always drill from the outside of the door.
- 6) Use the template to mark and drill other doors in the same location.

Left Hand Upper Door

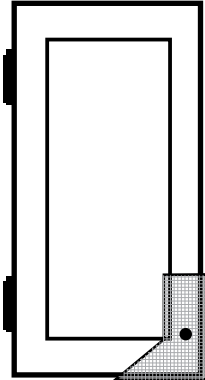

Right Hand Upper Door

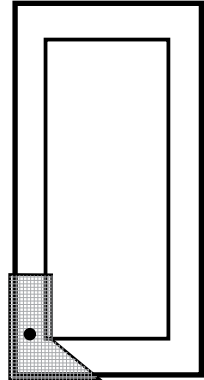


**D**

- 1) Mount cabinet knob using the shortest included screw that fits.
- 2) **DO NOT USE ELECTRIC DRILLS OR DRIVERS.**
- 3) **DO NOT OVER-TIGHTEN.**

**E**

Use the template to mark the drill hole position on bottom doors by flipping it vertically.

Right Hand Lower Door

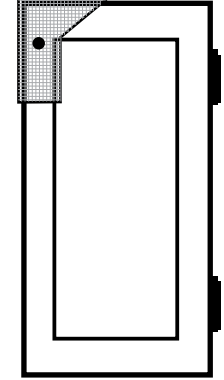


**KEEP PLASTIC TEMPLATE FOR FUTURE USE**

### Crystal Cabinet Knobs

**A**

- 1) Hold the knob in a position that is easy to reach, and aesthetically pleasing. This is commonly in the location shown in the drawing to the right for upper cabinets.
- 2) Mark the location with a pen or pencil.



**KNOB ALWAYS MOUNT  
OPPOSITE THE HINGES**

**B**

- 1) Use a 1/4" drill bit, and drill through the cabinet door in the marked position.
- 2) Drill from the outside.
- 3) Drill all other doors in the same position.


**C**

- 1) Mount cabinet knob using the shortest included screw that fits.
- 2) Tighten the screw by hand. Do not tighten with electric drill/driver.
- 3) Do not over-tighten.

### Brass Cabinet Knobs

**A**

- 1) Hold the knob in a position that is easy to reach, and aesthetically pleasing. This is commonly in the location shown in the drawing to the right for upper cabinets.
- 2) Mark the location with a pen or pencil.



**KNOB ALWAYS MOUNT  
OPPOSITE THE HINGES**

**B**

- 1) Use a 11/64" or 3/16" drill bit, and drill through the cabinet door in the marked position.
- 2) Drill from the outside.
- 3) Drill all other doors in the same position.

**C**

- 1) Mount cabinet knob using the shortest included screw that fits.
- 2) Tighten the screw by hand. Do not tighten with electric drill/driver.
- 3) Do not over-tighten.